



Use And Care

G U I D E



STANDARD-CLEANING ELECTRIC RANGE

7/93

MODELS RF315PXY
RF315PCY

A Note To You

Thank you for buying a Whirlpool appliance.

You have purchased a quality, *world-class* home appliance. Years of engineering experience have gone into its manufacturing. To ensure that you will enjoy many years of trouble-free operation, we have developed this Use and Care Guide. It is full of valuable information on how to operate and maintain your appliance properly and safely. Please read it carefully. Also, please complete and mail the Ownership Registration Card provided with your appliance. This will help us notify you about any new information on your appliance.

Your safety is important to us.

This guide contains safety symbols and statements. Please pay special attention to these symbols and follow any instructions given. Here is a brief explanation of the use of each symbol.

⚠ WARNING

This symbol will help alert you to such dangers as personal injury, burns, fire and electrical shock.

⚠ CAUTION

This symbol will help you avoid actions which could cause product damage (scratches, dents, etc.) and damage to your personal property.

Our Consumer Assistance Center number, 1-800-253-1301, is toll-free, 24 hours a day.

If you ever have a question concerning your appliance's operation, or if you need service, first see "If You Need Assistance Or Service" on page 37. If you need further help, feel free to call our Consumer Assistance Center. When calling, you will need to know your appliance's complete model number and serial number. You can find this information on the model and serial number plate (see diagram on page 6). For your convenience, we have included a handy place below for you to record these numbers, the purchase date from the sales slip and your dealer's name and telephone number. Keep this book and the sales slip together in a safe place for future reference.

Model Number _____

Dealer Name _____

Serial Number _____

Dealer Phone _____

Purchase Date _____

Important Safety Instructions

⚠ WARNING

To reduce the risk of fire, electrical shock, injury to persons, or damage when using the range, follow basic precautions, including the following:

General

- Read all instructions before using the range.
- Install or locate the range only in accordance with the provided Installation Instructions. The range must be installed by a qualified installer. The range must be properly connected to electrical supply and grounded.



- **WARNING:** To reduce the risk of tipping of the appliance, the appliance must be secured by a properly installed anti-tip bracket. To check if the bracket is installed properly, see "The anti-tip bracket" on page 30.
- **CAUTION:** Do not store things children might want above the range. Children could be burned or injured while climbing on it.
- Do not leave children alone or unattended in area where the range is in use. They should never be allowed to sit or stand on any part of the range. They could be burned or injured.
- Do not operate the range if it is damaged or not working properly.
- Do not use the range for warming or heating the room. Persons could be burned or injured, or a fire could start.

- Use the range only for its intended use as described in this manual.



- Do not touch surface units, areas near units, heating elements or interior surfaces of oven. Surface units and heating elements may be hot even though they are dark in color. Areas near surface units and interior surfaces of an oven become hot enough to cause burns. During and after use, do not touch, or let clothing or other flammable materials contact surface units, areas near units, heating elements or interior surfaces of oven until they have had sufficient time to cool. Other surfaces of the range may become hot enough to cause burns; such as, the oven vent opening, the surface near the vent opening, the cooktop, the oven door and window.



- Do not wear loose or hanging garments when using the range. They could ignite if they touch a hot surface unit and you could be burned.

IMPORTANT SAFETY INSTRUCTIONS

- Use only dry potholders. Moist or damp potholders on hot surfaces may result in burns from steam. Do not let potholder touch hot heating elements. Do not use a towel or bulky cloth for a potholder. It could catch on fire.
- Keep range vents unobstructed.
- Do not heat unopened containers. They could explode. The hot contents could cause burns and container particles could cause injury.
- Do not store flammable materials on or near the range. The fumes can create an explosion and/or fire hazard.
- Check to be sure glass cooking utensils are safe for use on the range. Only certain types of glass, glass-ceramic, ceramic, earthenware or other glazed utensils are suitable for cooktops without breaking due to the sudden change in temperature.
- Never leave surface units unattended at high heat settings. A boilover could result and cause smoking and greasy spillovers that may ignite.



When using the cooktop

- Make sure the reflector bowls are in place during cooking. Cooking without reflector bowls may subject the wiring and components underneath them to damage.
- Do not line reflector bowls with aluminum foil or other liners. Improper installation of these liners may result in a risk of electric shock or fire.
- Turn pan handles inward, but not over other surface units. This will help reduce the chance of burns, igniting of flammable materials, and spills due to bumping of the pan.

When using the oven

- Select a pan with a flat bottom that is about the same size as the surface unit. If pan is smaller than the surface unit, some of the heating element will be exposed and may result in the igniting of clothing or potholders. Correct pan size also improves cooking efficiency.
- Always position oven rack(s) in desired location while oven is cool. If a rack must be removed while oven is hot, do not let potholder contact hot heating element in oven.
- Use care when opening oven door. Let hot air or steam escape before removing or replacing food.

Grease

- Grease is flammable. Do not allow grease to collect around cooktop or in vents. Wipe spill-overs immediately.



- Do not use water on grease fires. Never pick up a flaming pan. Smother flaming pan on range by covering with a well-fitted lid, cookie sheet or flat tray. Flaming grease outside of pan can be extinguished with baking soda or, if available, a multipurpose dry chemical or foam-type extinguisher.


Care and cleaning

- Do not soak removable heating elements in water. The element will be damaged and shock or fire could result.
- Do not clean door heat seal. It is essential for a good seal. Care should be taken not to rub, damage or move the seal. Clean only parts recommended in this Use and Care Guide.
- Do not repair or replace any part of the range unless specifically recommended in this manual. All other servicing should be referred to a qualified technician.
- Disconnect the electrical supply before servicing the range.


– SAVE THESE INSTRUCTIONS –

Parts And Features

This section contains captioned illustrations of your range. Use them to become familiar with the location and appearance of all parts and features.

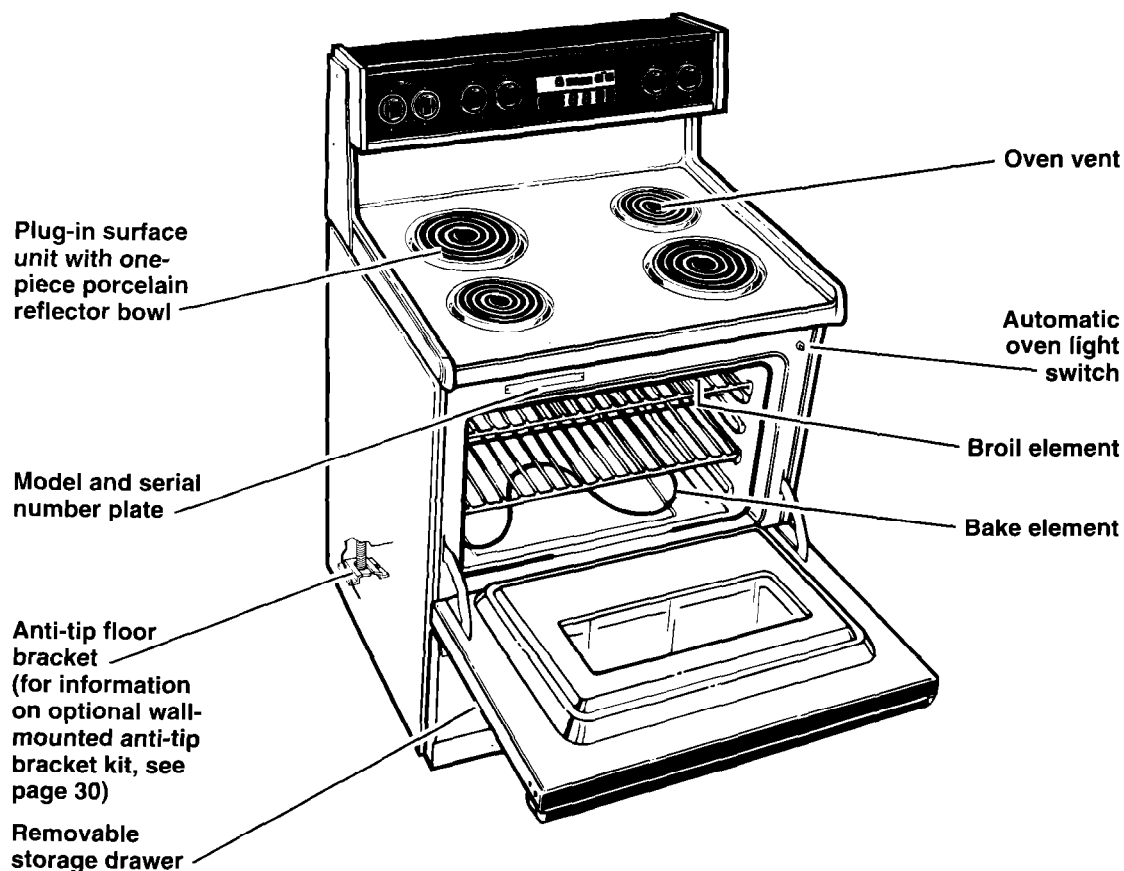

Control panel

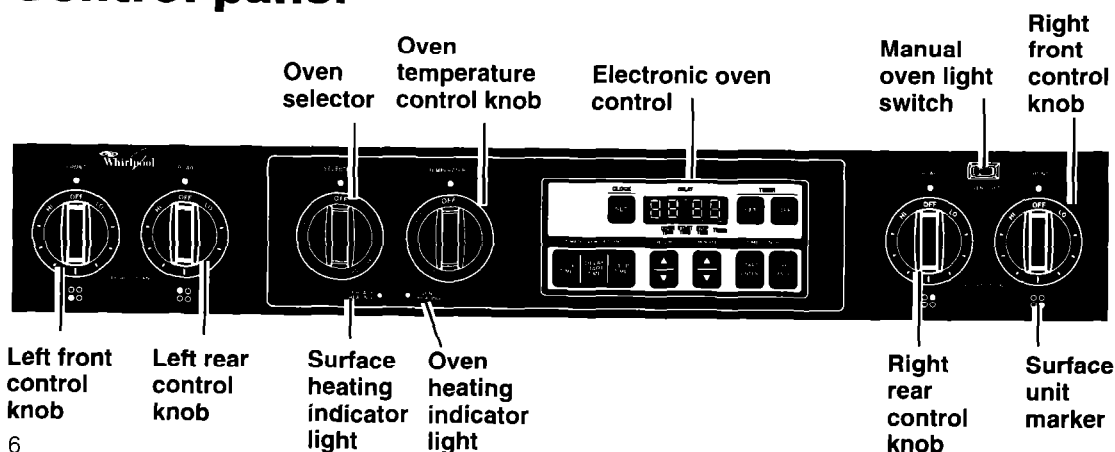

Using Your Range

In This Section

| | Page | | Page |
|--|------|---|------|
| Using the surface units | 7 | Broiling | 15 |
| Positioning racks and pans | 9 | Broiling tips | 17 |
| For best air circulation | 10 | Energy saving tips | 17 |
| Using aluminum foil for baking | 10 | Using the electronic MEALTIMER™ control | 18 |
| The electronic oven control | 11 | The oven vent | 28 |
| Setting the clock | 12 | The storage drawer | 29 |
| Using the electronic Minute Timer .. | 13 | The anti-tip bracket | 30 |
| Using the Off/Cancel pad | 14 | Optional door panel pac | 30 |
| Baking/roasting | 14 | | |
| Adjusting the oven temperature control | 15 | | |

To obtain the best cooking results possible, you must operate your range properly. This section gives you important information for efficient and safe use of your range.

Using the surface units


Push in control knobs before turning them to a setting. You can set them anywhere between HI and OFF.

Surface unit markers

The solid dot in the surface unit marker shows which surface unit is turned on by that knob.

Surface heating indicator light

The SURFACE HEATING Indicator Light on the control panel will glow when a surface unit is turned on.

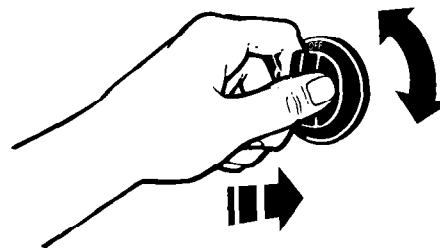

⚠ WARNING

Burn and Fire Hazard

Be sure all control knobs are turned to OFF and all indicator lights are OFF when you are not cooking.

Someone could be burned or a fire could start if a surface unit is accidentally left ON.

USING YOUR RANGE

Until you get used to the settings, use the following as a guide. For best results, start cooking at the high setting; then turn the control knob down to continue cooking.

| SETTING | RECOMMENDED USE |
|--------------------------|--|
| HI | <ul style="list-style-type: none">• To start foods cooking.• To bring liquids to a boil. |
| Medium-high | <ul style="list-style-type: none">• To hold a rapid boil.• To fry chicken or pan-cakes. |
| Medium (opposite OFF) | <ul style="list-style-type: none">• For gravy, pudding and icing.• To cook large amounts of vegetables. |
| Medium-low | <ul style="list-style-type: none">• To keep food cooking after starting it on a higher setting. |
| LO | <ul style="list-style-type: none">• To keep food warm until ready to serve. |

Cookware tips

- **Select a pan** that is about the same size as the surface unit.
- **NOTE: For best results and greater energy efficiency**, use only flat-bottomed utensils that make good contact with the surface units. Utensils with rounded, warped, ribbed (such as some porcelain enamelware) or dented bottoms could cause severe overheating, which damages the utensil and/or surface unit.
Woks, canners and teakettles with flat bottoms suitable for use on your cooktop are now available in most stores that sell housewares.
- **The pan** should have straight sides and a tight-fitting lid.
- **Choose medium to heavy gauge** (thickness) pans that are fairly lightweight.
- **The pan material** (metal or glass) affects how fast heat transfers from the surface unit through the pan material and how evenly heat spreads over the pan bottom. Choose pans that provide the best cooking results.
- **Handles** should be made of sturdy, heat-resistant material and be securely attached to the pan.

⚠ CAUTION

Product Damage Hazard

- If a surface unit stays red for a long time, the bottom of the pan is not flat enough or is too small for the surface unit. Prolonged usage of incorrect utensils could result in damage to the surface unit, cooktop, wiring and surrounding areas. To prevent damage, use correct utensils, start cooking on HI and turn control down to continue cooking.
- Do not leave an empty utensil, or one which has boiled dry, on a hot surface unit. The utensil could overheat and could damage the utensil or surface unit.

Home canning information

To protect your range:

- **Use flat-bottomed canners/pans** for best results.
- **Use the largest surface unit** for best results. Also, use a canner/pan which can be centered over the surface unit and which does not extend more than one inch outside surface unit area. Large diameter canners/pans, if not properly centered, trap heat and can cause damage to the cooktop.
- **Do not place canner** on two surface units at the same time. Too much heat will build up and will damage the cooktop.
- **Start with hot water.** This reduces the time the control is set on high. Reduce heat setting to lowest position needed to keep water boiling.
- **Keep reflector bowls clean** for best heat reflection.
- To prolong the life of the elements:
 - **Prepare small batches** at a time.
 - **Do not use elements** for canning all day.

Optional canning kit

The large diameter of most water-bath or pressure canners combined with high heat settings for long periods of time can shorten the life of regular surface units and cause damage to the cooktop.

If you plan to use the cooktop for canning, we recommend the installation of a Canning Kit. Order the kit (Part No. 242905) from your Whirlpool dealer or authorized WhirlpoolSM service company.

Positioning racks and pans

For baking/roasting with one rack, place the rack so the top of the food will be centered in the oven.

Rack placement for specific foods:

| FOOD | RACK POSITION |
|---|---------------------------------------|
| Frozen pies, large roasts, turkeys | Lowest level or 2nd level from bottom |
| Angel and bundt cakes, most quick breads, yeast breads, casseroles, meats | 2nd level from bottom |
| Cookies, biscuits, muffins, cakes, non-frozen pies | 2nd or 3rd level from bottom |

When baking on two racks, arrange racks on bottom and third level from bottom.

NOTE: For recommended rack placement when broiling, see "Broiling rack position chart" on page 16.

⚠ WARNING

Personal Injury Hazard

- Always position oven rack(s) in desired location before turning oven on. Be sure the rack(s) is level.
- If rack(s) must be moved while oven is hot, use potholders or oven mitts to protect hands.

Failure to follow the above precautions could result in personal injury.

For best air circulation

Hot air must circulate around the pans in the oven for even heat to reach all parts of the oven. This results in better baking.

- **Place** the pans so that one is not directly over the other.
- **For best results, allow** 1½ to 2 inches (4-5 cm) of space around each pan and between pans and oven walls. There must be a minimum space of 1 inch (2.5 cm).
- **Use** only one cookie sheet in the oven at one time.

Use the following as a guide to determine where to place the pans.

One pan


Place in the center of the oven rack.

Two pans

Place in opposite corners of the oven rack.

Three or four pans


Place in opposite corners on each oven rack. Stagger pans so no pan is directly over another.

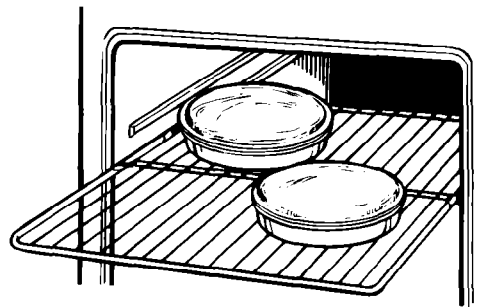

Using aluminum foil for baking

Use aluminum foil to catch spillovers from pies or casseroles.

- **Place** the foil on the oven rack below the rack with the food. **Turn up** foil edges and **make sure** foil is about 1 inch (3 cm) larger all around than the dish holding the food.
- **Do not cover** the entire rack with aluminum foil. It will reduce air circulation and cause poor cooking results.
- **Do not line** oven bottom or entire oven rack with foil or other liners. Poor baking will result.

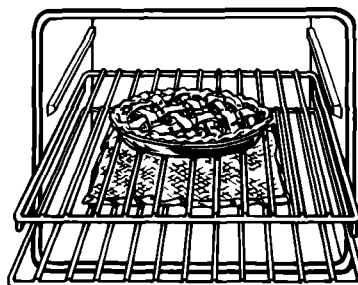


⚠ WARNING

Electrical Shock and Fire Hazard

Do not allow foil to touch the heating elements.

Failure to follow this precaution could result in electrical shock or fire hazard and damage to the elements.

The electronic oven control

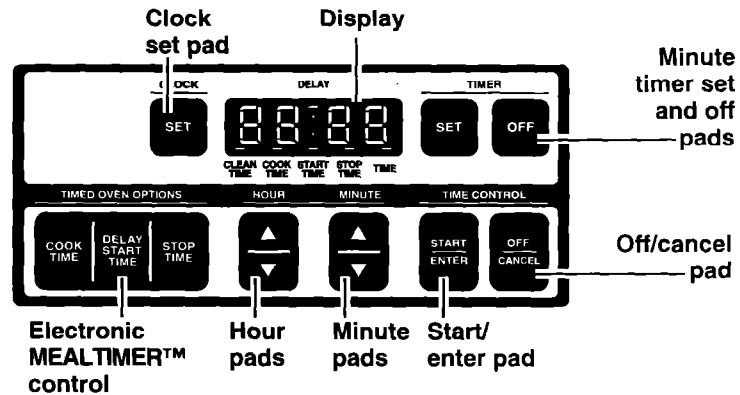


Display/clock

- **When you first plug in the range,** "88:88" will appear in the display. If, after you set the clock (page 12), "88:88" again appears in the display, your electricity was off for a while. Reset the clock.
- **When you are not using the oven,** the control is an accurate clock.
- **When you are using the oven or Minute Timer,** the display will show the time settings and what command pads have been pressed.
- **When showing the time of day,** the display will show the hour and minutes.
- **When you are using the Minute Timer,** the display will show minutes and seconds in the following sequence:
 - **For settings from 1-59 minutes,** the display will count down each second.
 - **For settings over 1 hour,** the display will count down each minute.
- **When you are using Cook Time and/or Stop Time,** the display will show hours and minutes.

Control knobs

There are two control knobs: the Oven Selector and the Oven Temperature Control Knob. The Oven Selector tells the oven which mode you wish to cook in (Bake, Broil, Time Bake), while the Oven Temperature Control Knob lets you set a specific cooking temperature. When using the MEALTIMER™ control you will use these knobs along with command pads (see “Using the electronic MEALTIMER™ control” on page 18).

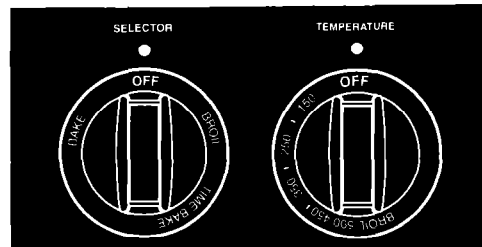

Command pads


The command pads tell the oven what to do and in what order. A few examples:

- **Clock/Set** tells the oven you are going to set the clock.
- **Off/Cancel** tells the oven or Minute Timer to turn off.


Each command pad (except Off/Cancel and Start/Enter) has its own Indicator Light. The Indicator Light comes on when you touch the command pad.

Setting the clock

1. **Push** the Clock/Set pad. The colon flashes and the previously set time of day will light up in the display.

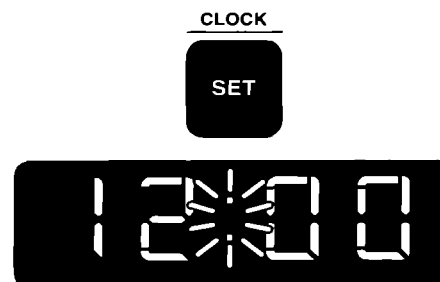

2. **Use** the Hour and Minute pads to set the time of day. **Push** the “up” (▲) or “down” (▼) pad(s) until the correct time shows in the display.

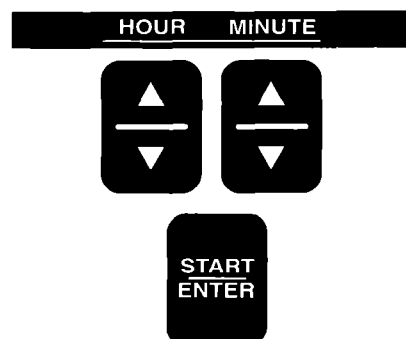


3. **Push** the Start/Enter pad.

NOTE: If you do not want the clock time displayed, push and hold the Clock/Set pad for 4 seconds. To display the clock time again, push the Clock/Set pad once, then reset the clock time if necessary.

Using the electronic Minute Timer

The Minute Timer does not start or stop the oven. It works like a kitchen timer. It can be set in hours and minutes up to 11 hours, 59 minutes. The Minute Timer will display minutes and seconds for settings under one hour. You will hear four 1-second tones when the set time is up.

1. **Push** the Timer Set pad. The Timer Indicator Light will come on and the display will show "0:00" with the colon flashing.

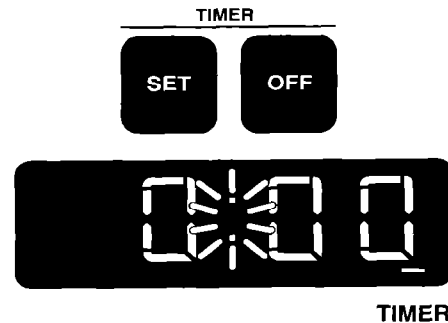

2. **Use** the Hour and Minute pads to set the desired time. **Push** the "up" (▲) or "down" (▼) pad(s) until the correct time shows in the display.




3. **Push** the Start/Enter pad. The Minute Timer will begin counting down immediately after the timer is started.

When time is up, "End" will show in the display and you will hear four ½-second tones. You will also hear two 1-second tones every minute until you push one of the two Timer pads.

NOTE: To disable the reminder tones, push and hold the Timer Set pad for four seconds. To reactivate the tones, repeat this procedure.

To cancel the Minute Timer:

- **Push** the Timer Off pad. The time of day will show in the display.

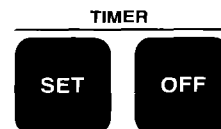

Using the Off/Cancel pad

The Off/Cancel pad will cancel any function except for the Clock/Set and Timer Set functions. When the Off/Cancel pad is pushed, the display will show the time of day or, if Minute Timer is also being used, the time remaining.




Baking/roasting

1. **Position** the rack(s) properly before turning on the oven. **To change rack position, lift** rack at front and **pull out**. For further information, **see** "Positioning racks and pans" on page 9.

2. **Set** the Oven Selector to **BAKE**.


3. **Set** the Oven Temperature Control Knob to the baking/roasting temperature you want. The **OVEN HEATING Indicator Light** will come on. The oven is preheated when the **OVEN HEATING Indicator Light** first goes off.

NOTE: Do not preheat oven when roasting or cooking items such as casseroles.

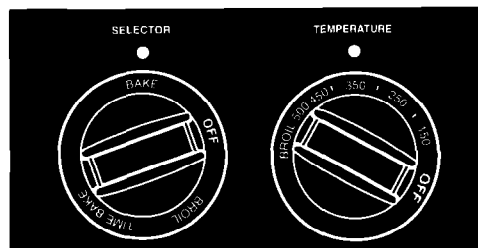


4. **Put** food in the oven. During baking/roasting, the elements will turn on and off to maintain the temperature setting. The **OVEN HEATING Indicator Light** will turn on and off with the elements.

NOTE: The top element helps heat during baking/roasting, but does not turn red.

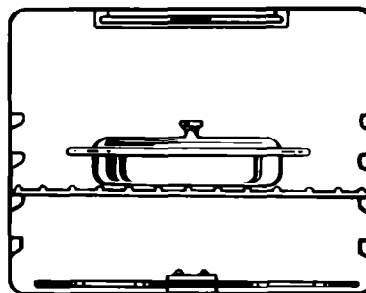

5. When **baking/roasting is done**, turn **both** the Oven Selector and the Oven Temperature Control Knob to **OFF**. The **OVEN HEATING Indicator Light** will go off.

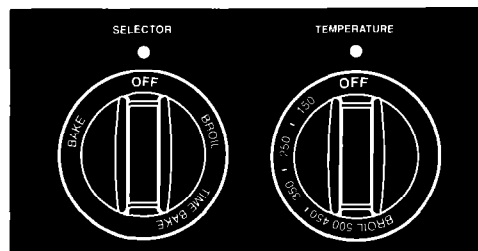


Adjusting the oven temperature control


Oven temperature controls will gradually shift after years of use. So, even though your new oven is properly adjusted to provide accurate temperatures, it may cook faster or slower than your old oven.

If, after using the oven for a period of time, you are not satisfied with the temperature settings, you can change them by following these steps:

1. **Turn** the Oven Temperature Control Knob to the off position. **Pull** knob straight off and **flip** it over.

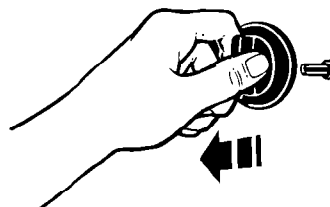

2. **Loosen** the locking screws inside the control knob. **Note the position of the notches.**
3. **To lower the temperature, hold** knob handle firmly and **move** the tooth a notch counter-clockwise. Each notch equals about 5°F (2.5°C).
4. **To raise the temperature, hold** knob handle firmly and **move** the tooth a notch clockwise. Each notch equals about 5°F (2.5°C).

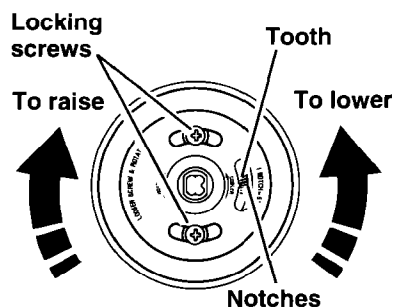


Tighten the locking screws and replace the control knob.

Broiling

1. **Position** the rack before turning the oven on. **See** "Broiling rack position chart" on page 16.
2. **Put** the broiler pan and food on the rack.
3. **Close** the door to the Broil Stop position (open about 4 inches [10.2 cm]). The door will stay open by itself.
4. **Set** the Oven Selector and Oven Temperature Control Knob to BROIL. The OVEN HEATING Indicator Light will come on.

NOTE: Do not preheat oven when broiling.

5. **When broiling is done, turn both** the Oven Selector and Oven Temperature Control Knob to OFF. The OVEN HEATING Indicator Light will go off.

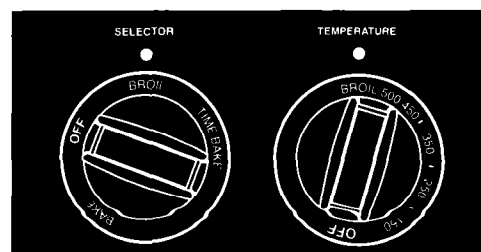

USING YOUR RANGE

Custom broil


- If food is cooking too fast, turn the Oven Temperature Control Knob **counterclockwise** until the OVEN HEATING Indicator Light goes off.
- If you want the food to broil slower from the start, set the Oven Temperature Control Knob between 170°F and 325°F (77°C and 163°C). These temperature settings allow the broil heating element to cycle and to slow cooking. The lower the temperature, the slower the cooking.
- **Fish and chicken** are some foods that may cook better if you use lower broiling temperatures.

The Oven Selector must be on BROIL for all broiling temperatures.

NOTE: Leave the oven door partly open whenever using the oven to broil. This allows the oven to maintain proper temperatures.

Broiling rack position chart

| RACK POSITION FROM BOTTOM | TYPE OF FOOD/ DONENESS |
|---------------------------|---|
| 4 | Hamburger patties and thin steaks, ½" thick or less |
| 3 | Quickly searing food, rare and medium steaks, medium patties, ham slices, fish steaks, frankfurters |
| 2 | Well-done steaks and patties, lamb chops, split chicken, pork steaks and chops, whole fish |

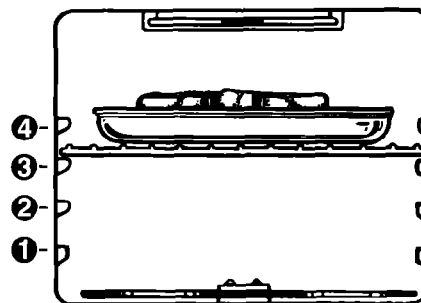

Broiling tips

- **Use** the broiler pan and grid for broiling. They are designed to drain excess liquid and grease away from the cooking surface to help prevent spatter, smoke or fire.
- **Refer** to a broiling chart in a reliable cookbook for correct broiling times.
- **After broiling, remove** the broiler pan from the oven when you remove the food. Drippings will bake on the pan if you leave it in the heated oven.

⚠ WARNING

Fire Hazard

- Place meat the correct distance from the element. Meat placed too close to the element could spatter, smoke, burn or catch fire during broiling.
- To ensure adequate grease drainage, do not use cookie sheets or similar pans for broiling. Also, covering the broiler grid with foil is not recommended. Poor drainage of grease could result in fire. If foil is used, cut slits in foil to line up with all openings in broiler grid. Grease can then drain away and cool in pan.

Energy saving tips

Although the energy used for cooking is usually a very small percentage of the total energy used in the home, cooking energy can be used efficiently. Here are some tips to help you save energy when using your cooking product.

- **Use** pans with flat bottoms, straight sides and tight-fitting lids.
- **Match** the pan to the surface unit size.
- **Cook** with a minimum of liquid or fat to help shorten cooking time.
- **Preheat** pans only when recommended and for the shortest time possible.
- **Start** food on higher heat settings, then set surface unit control on low or off to finish cooking. Use retained heat for cooking when possible.
- **Use** the more efficient surface units instead of the oven when possible.
- **Turn on** the surface unit only after placing filled pan on the unit.
- **“Oven peeking”** may cause heat loss, longer cooking times and unsatisfactory baking results. Rely on your timer to keep track of the cooking time.
- **Bake** cakes, pies or cookies when oven is warm. Best time is after a meal has been cooked in it.
- **Preheat** the oven no longer than necessary.
- **Plan** your meals for the most efficient use of the range. When using the oven to cook one food, try to cook the rest of the meal in it also.
- **Do not preheat** when broiling, roasting or cooking items such as casseroles.
- **Keep** reflector bowls clean for best heat reflection.

Using the electronic MEALTIMER™ control

The electronic MEALTIMER™ control will turn the oven on and off at times you set ... even when you are not around.

Delayed time baking/roasting is ideal for foods which do not require a preheated oven, such as meats and casseroles. **Do not use delayed time cooking for cakes, cookies, etc. ... undercooking will result.**


Before using the electronic MEALTIMER control, make sure the clock is set to the correct time of day. (See "Setting the clock" on page 12.)

This section discusses two methods for starting baking/roasting now and stopping automatically later, and three methods for starting and stopping baking/roasting automatically. Read this section carefully to choose which method(s) is best for you.

To start baking/roasting now and stop automatically

Method 1—Using Cook Time:

1. **Position** the oven rack(s) properly and **put** food in the oven.
2. **Set** the Oven Selector to TIME BAKE.
3. **Set** the Oven Temperature Control Knob to the desired temperature.

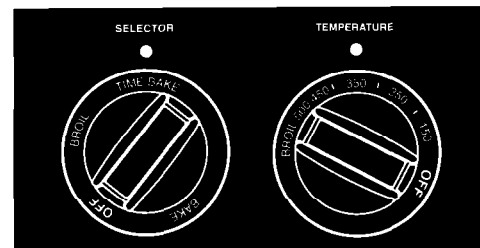

4. **Push** the Cook Time pad. "0:00" with the colon flashing and the Cook Time Indicator Light will show in the display.

5. **Use** the Hour and Minute pads to set the desired cooking time. **Push** the "up" (▲) or "down" (▼) pad(s) until the correct time shows in the display.

This example shows a desired baking/roasting time of 30 minutes.

6. **Push** the Start/Enter pad. The OVEN HEATING Indicator Light will come on.

NOTE: You can change the Cook Time after pushing the Start/Enter pad by repeating just Steps 4 and 5.




7. **The display** will count down the baking/roasting time in minutes.

8. **When the baking/roasting time is completed**, the oven will turn off automatically, beep four times, and "End" will show in the display. You will also hear two tones once every minute until you push the Off/Cancel pad.

NOTE: To disable the reminder tones, push and hold the Timer Set pad for 4 seconds. To reactivate the tones, repeat this procedure.

9. **Push** the Off/Cancel pad to return the display to the time of day.


10. **Turn** both the Oven Selector and the Oven Temperature Control Knob to OFF.

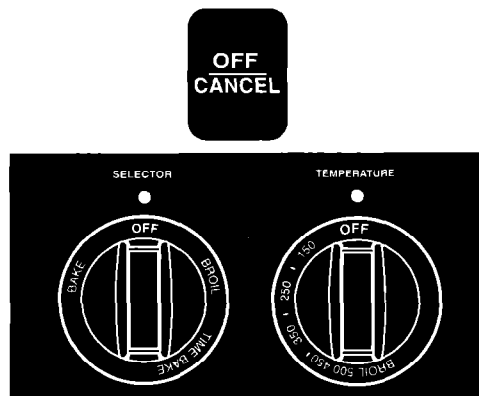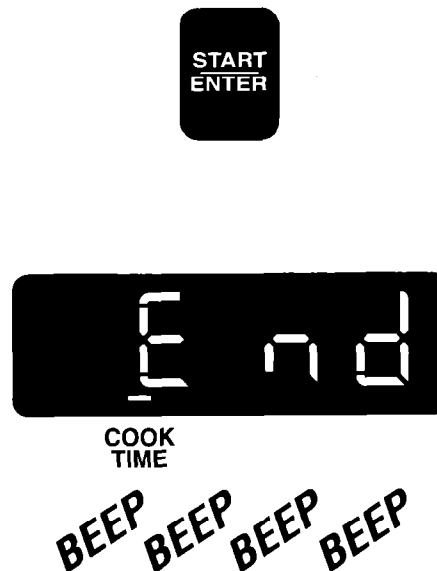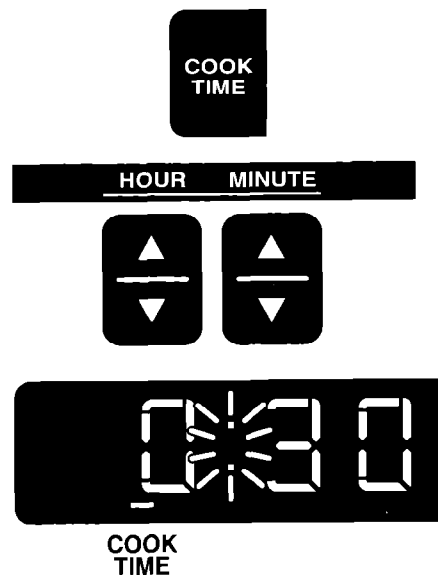

USING YOUR RANGE


Method 2–Using Stop Time:

1. **Position** the oven rack(s) properly and **put** food in the oven.
2. **Set** the Oven Selector to TIME BAKE.
3. **Set** the Oven Temperature Control Knob to the desired temperature.

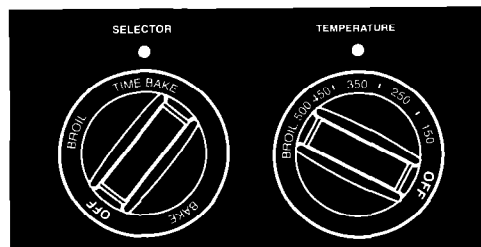

- 4. Push** the Stop Time pad. The time of day with the colon flashing and the Stop Time Indicator Light will show in the display.
- 5. Use** the Hour and Minute pads to set the desired stop time. **Push** the “up” (▲) or “down” (▼) pad(s) until the correct time shows in the display.

This example shows a desired stop time of 2 o'clock. The cook time will be the difference between the stop time and the current time of day.

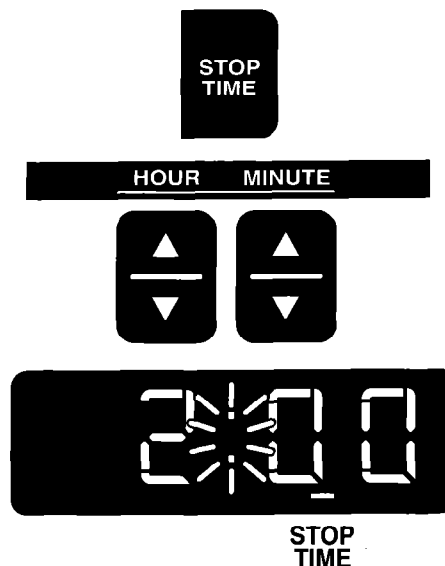


- 6. Push** the Start/Enter pad. The OVEN HEATING Indicator Light will come on.

NOTE: You can change the Stop Time after pushing the Start/Enter pad by repeating just Steps 4 and 5.

7. **The display** will count down the baking/roasting time in minutes.
8. **When the baking/roasting time is completed**, the oven will turn off automatically, beep four times, and “End” will show in the display. You will also hear two tones once every minute until you push the Off/Cancel pad.

NOTE: To disable the reminder tones, push and hold the Timer Set pad for 4 seconds. To reactivate the tones, repeat this procedure.

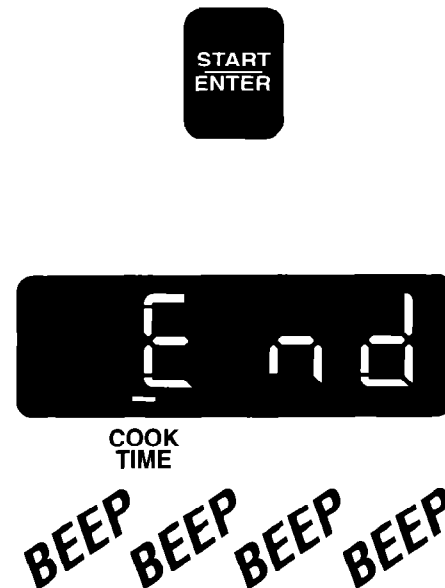

9. **Push** the Off/Cancel pad to return the display to the time of day.

10. **Turn** both the Oven Selector and the Oven Temperature Control Knob to OFF.

To delay start and stop automatically




Method 1-Using Cook Time and Start Time:

1. **Position** the oven rack(s) properly and **put** food in the oven.
2. **Set** the Oven Selector to TIME BAKE.
3. **Set** the Oven Temperature Control Knob to the desired temperature.

4. **Push** the Cook Time pad. "0:00" with the colon flashing and the Cook Time Indicator Light will show in the display.

5. **Use** the Hour and Minute pads to set the desired cooking time. **Push** the "up" (▲) or "down" (▼) pad(s) until the correct time shows in the display.

This example shows a desired baking/roasting time of 30 minutes.

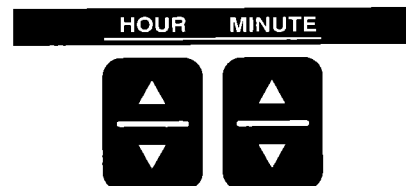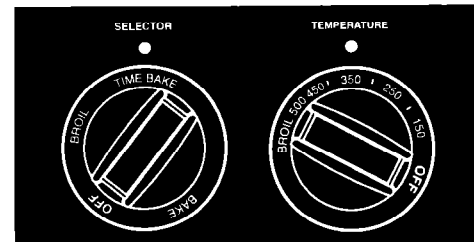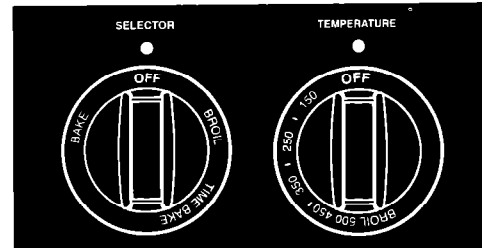


COOK
TIME

USING YOUR RANGE

6. **Push** the Delay Start Time pad. The time of day with the colon flashing will show in the display. The Start Time Indicator Light will light up, and the Cook Time Indicator Light will flash.



7. **Use** the Hour and Minute pads to set the desired start time. **Push** the “up” (▲) or “down” (▼) pad(s) until the correct start time shows in the display.

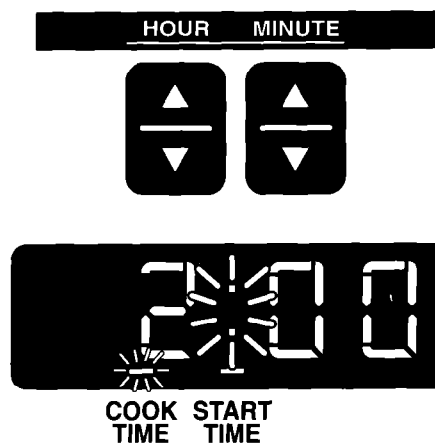

This example shows a desired start time of 2 o'clock. The oven will automatically shut off at 2:30 (the set start time plus the set cook time).

8. **Push** the Start/Enter pad. The Delay Indicator Light will light up in the display to indicate that the oven is programmed to start at a later time. The Cook Time and Start Time Indicator Lights will flash.

NOTE: You can change a time setting after pushing the Start/Enter pad by repeating just Steps 4 and 5 or 6 and 7.




9. **When the start time is reached**, the Delay Indicator Light will go off, a single tone will sound and the display will count down the baking/roasting time in minutes.




10. When the **baking/roasting time is completed**, the oven will turn off automatically, beep four times, and "End" will show in the display. You will also hear two tones once every minute until you push the Off/Cancel pad.

NOTE: To disable the reminder tones, push and hold the Timer Set pad for 4 seconds. To reactivate the tones, repeat this procedure.

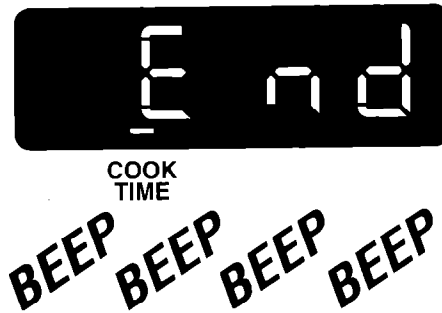

11. Turn both the Oven Selector and the Oven Temperature Control Knob to OFF.

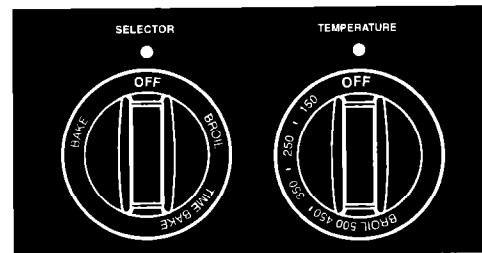


To cancel the MEALTIMER™ control setting:

- Push the Off/Cancel pad to return the display to the time of day.



Method 2—Using Start Time and Stop Time:

1. **Position** the oven rack(s) properly and **put** food in the oven.
2. **Set** the Oven Selector to TIME BAKE.
3. **Set** the Oven Temperature Control Knob to the desired temperature.

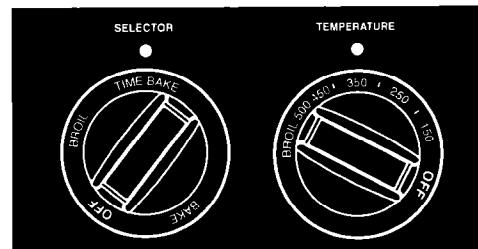


4. **Push** the Delay Start Time pad. The time of day with the colon flashing will show in the display and the Start Time Indicator Light will light up.




USING YOUR RANGE

5. **Use** the Hour and Minute pads to set the desired start time. **Push** the “up” (▲) or “down” (▼) pad(s) until the correct time shows in the display.

This example shows a desired start time of 2 o'clock.

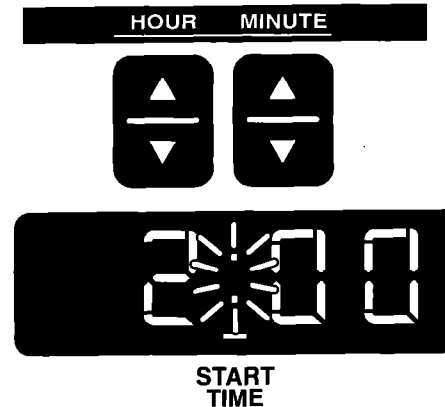


6. **Push** the Stop Time pad. The time of day with the colon flashing will show in the display, the Stop Time Indicator Light will light up, and the Start Time Indicator Light will flash.

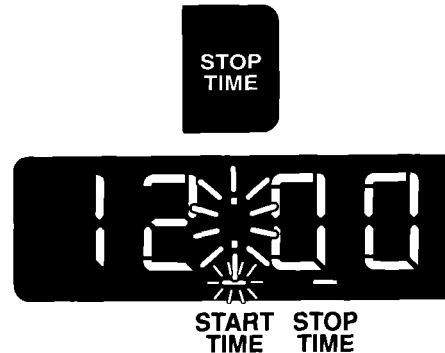

7. **Use** the Hour and Minute pads to set the desired stop time. **Push** the “up” (▲) or “down” (▼) pad(s) until the correct time shows in the display.

This example shows a desired stop time of 2:30. This provides a cook time of 30 minutes (the difference between the start and stop times).

NOTE: If you do not set a stop time within 5 minutes, the display will return to the time of day.

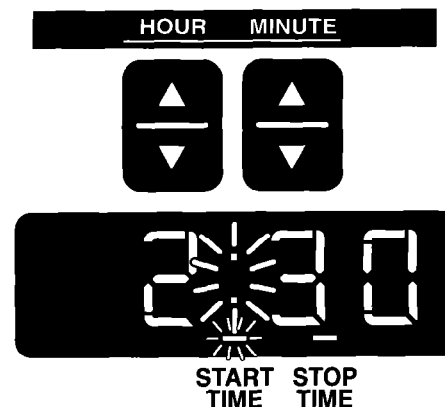

8. **Push** the Start/Enter pad. The Delay Indicator Light will light up in the display to indicate that the oven is programmed to start at a later time. The Start Time and Stop Time Indicator Lights will flash.

NOTE: You can change a time setting after pushing the Start/Enter pad by repeating just Steps 4 and 5 or 6 and 7.



9. When the start time is reached, the Delay Indicator Light will go off, a single tone will sound and the display will count down the baking/roasting time in minutes. The example at right shows a baking/roasting time of 30 minutes (the difference between the stop and start times).



COOK
TIME

10. When the baking/roasting time is completed, the oven will turn off automatically, beep four times, and "End" will show in the display. You will also hear two tones once every minute until you push the Off/Cancel pad.




COOK
TIME

NOTE: To disable the reminder tones, push and hold the Timer Set pad for 4 seconds. To reactivate the tones, repeat this procedure.

BEEP BEEP BEEP BEEP

11. Turn both the Oven Selector and the Oven Temperature Control Knob to OFF.

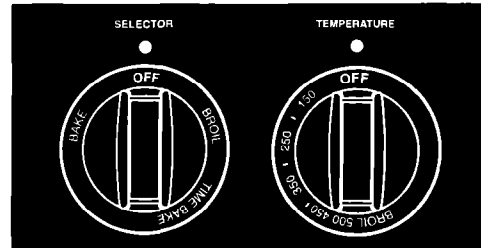


To cancel the MEALTIMER™ control setting:

- Push the Off/Cancel pad to return the display to the time of day.



Method 3—Using Cook Time and Stop Time:


1. Position the oven rack(s) properly and put food in the oven.
2. Set the Oven Selector to TIME BAKE.
3. Set the Oven Temperature Control Knob to the desired temperature.

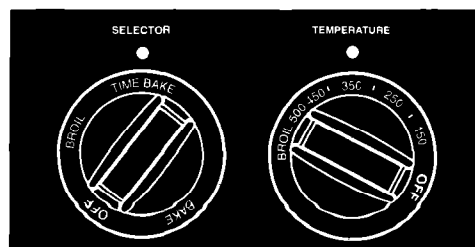


USING YOUR RANGE

4. **Push** the Cook Time pad. "0:00" with the colon flashing and the Cook Time Indicator Light will show in the display.
5. **Use** the Hour and Minute pads to set the desired cooking time. **Push** the "up" (▲) or "down" (▼) pad(s) until the correct time shows in the display.

This example shows a desired baking/roasting time of 30 minutes.

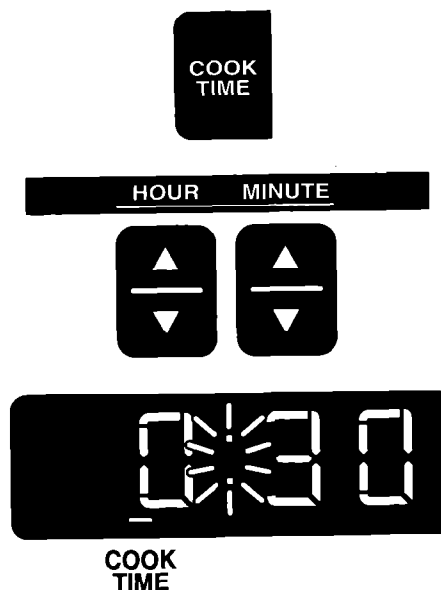


6. **Push** the Stop Time pad. The time of day with the colon flashing will show in the display, the Stop Time Indicator Light will light up, and the Cook Time Indicator Light will flash.

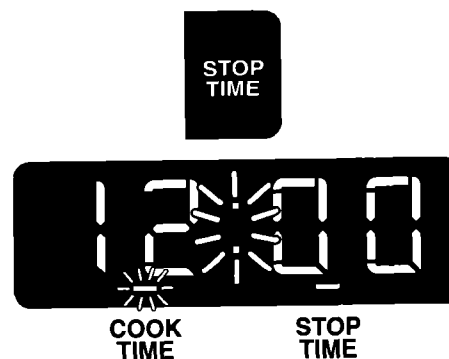

7. **Use** the Hour and Minute pads to set the desired stop time. **Push** the "up" (▲) or "down" (▼) pad(s) until the correct time shows in the display.

This example shows a desired stop time of 2:30. The oven will automatically start cooking at 2:00 (the set stop time minus the set cook time).

NOTE: If you do not set a stop time within 5 minutes, the display will return to the time of day.

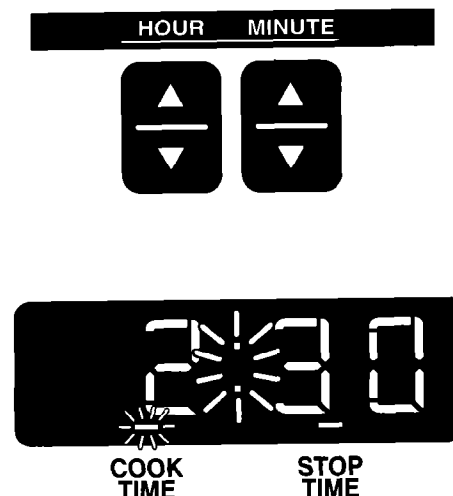

8. **Push** the Start/Enter pad. The Delay Indicator Light will light up in the display to indicate that the oven is programmed to start at a later time. The Cook Time and Stop Time Indicator Lights will flash.

NOTE: You can change a time setting after pushing the Start/Enter pad by repeating just Steps 4 and 5 or 6 and 7.



DELAY




9. **When the start time is reached**, the Delay Indicator Light will go off, a single tone will sound and the display will count down the baking/roasting time in minutes.




10. **When the baking/roasting time is completed**, the oven will turn off automatically, beep four times, and "End" will show in the display. You will also hear two tones once every minute until you push the Off/Cancel pad.

NOTE: To disable the reminder tones, push and hold the Timer Set pad for 4 seconds. To reactivate the tones, repeat this procedure.

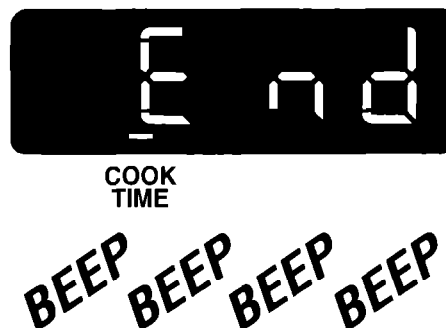

11. **Turn** both the Oven Selector and the Oven Temperature Control Knob to OFF.

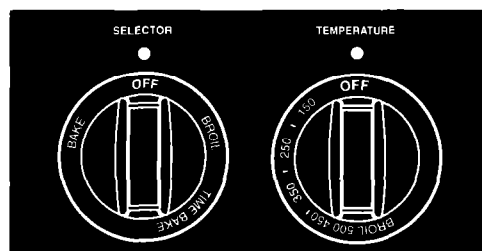

USING YOUR RANGE

To cancel the MEALTIMER™ control setting:

- **Push** the Off/Cancel pad to return the display to the time of day.



⚠ WARNING

To avoid sickness and food waste when using the MEALTIMER™ control:


- Do not let most UNFROZEN food stand for more than two hours before cooking starts.
- Do not allow food to remain in oven for more than two hours after the end of cooking cycle.

NOTE: Do not use foods that will spoil while waiting for cooking to start. Such foods are: dishes with milk or eggs, cream soups and cooked meats or fish. Also, foods containing baking powder or yeast will not rise properly when cooked using delay start.

The oven vent

Hot air and moisture escape from the oven through a vent under the right rear surface unit. You can cook on the unit or keep food warm on it while the oven is on. The vent is needed for air circulation. **Do not block the vent.** Poor baking/roasting can result.

NOTE: Plastic utensils left over the vent can melt.

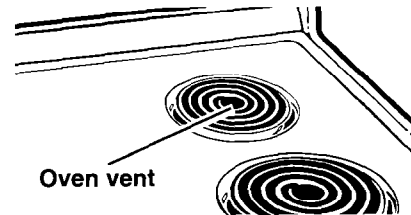

⚠ WARNING

Burn and Fire Hazard


- If you leave a utensil on the right rear surface unit, use potholders when moving it. Pan handles could become hot enough to burn.
- Keep flammable materials away from oven vent. Failure to do so could result in burns or a fire.

The storage drawer

You can remove the storage drawer to make it easier to clean under the range and to check for installation of the anti-tip floor bracket (if you have one). **Use care when handling the drawer.**


Removing the storage drawer:

1. **Empty** drawer of any pots and pans before removing drawer. **Pull** drawer straight out to the first stop. **Lift** front and **pull out** to the second stop.
2. **Lift** back slightly and **slide** drawer all the way out.

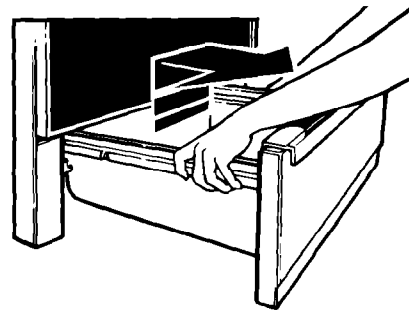


Replacing the storage drawer:

1. **Fit** ends of drawer slide rails into the drawer guides on both sides of opening.
2. **Lift** drawer front and **push in** until metal stops on drawer slide rails clear white stops on drawer guides. **Lift** drawer front again to clear second stop and **slide** drawer closed.

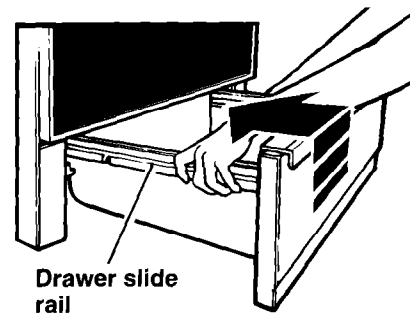


The anti-tip bracket

The range will not tip during normal use. However, tipping can occur if you apply too much force or weight to the open door without the anti-tip bracket properly secured.
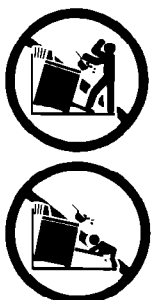
| | |
|---|---|
|  | <p style="text-align: center;">⚠ WARNING</p> <p style="text-align: center;">Personal Injury Hazard</p> <ul style="list-style-type: none">• To reduce risk of range tipping over, secure range with a properly installed anti-tip bracket supplied with range or an optional wall-mounted anti-tip bracket kit.• If range is moved for cleaning or service, check that anti-tip device is engaged before using range. <p>Failure to follow the above precautions could result in personal injury.</p> |
|---|---|


To verify the anti-tip bracket is engaged (if you have a floor bracket):

- **Remove** the storage drawer. (See page 29.)
- **Look** to see if the anti-tip bracket is attached to floor with screws.
- **Make sure** one rear leveling leg is positioned under the anti-tip bracket.
- **See** Installation Instructions for further details.

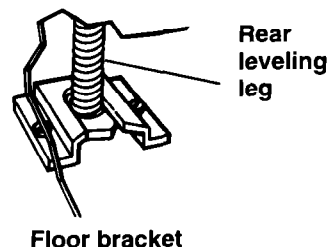

To verify the anti-tip bracket is engaged (if you have a wall bracket):

- **Look** to see if the anti-tip bracket is attached with screws to the wall behind the control panel.
- **Make sure** the cable on the back of the range is secured by the two hooks on the bracket.
- **Cable** must be unhooked from wall bracket to move range for cleaning or service. Reconnect cable before using range.
- **See** Installation Instructions for further details.

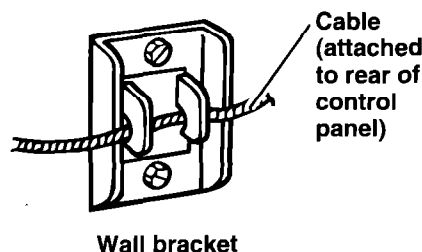

Optional door panel pac

If you would like to change the color of your oven door glass to white or almond, you can order one of these kits from your Whirlpool Dealer. The kits include easy installation instructions.

- **White** (Kit No. 814069)
- **Almond** (Kit No. 814070)

Caring For Your Range

In This Section

| | Page | Page |
|---------------------------------------|------|-------------------------|
| Surface units and reflector bowls ... | 31 | Cleaning chart 34 |
| Lift-up cooktop | 33 | The oven light 36 |
| Removing the oven door | 33 | |

Your range is designed for ease of care. You can do most cleaning with items found around your home. Cleaning your range whenever spills or soiling occurs will help to keep it looking and operating like new.

⚠ WARNING

Burn and Electrical Shock Hazard




Make sure all controls are OFF and the range is cool before cleaning.

Failure to do so could result in burns or electrical shock.

Surface units and reflector bowls

Removing

1. **Make sure** all surface units are off and cool before removing surface units and reflector bowls.
2. **Lift** the edge of the unit, opposite the receptacle, just enough to clear the element hold-down clip and the reflector bowl.
3. **Pull** the surface unit straight away from the receptacle.

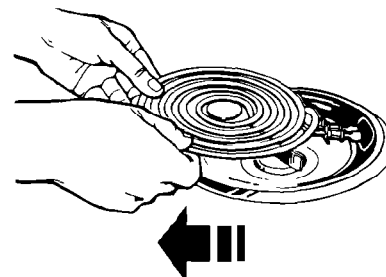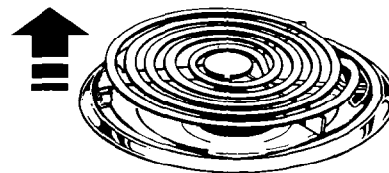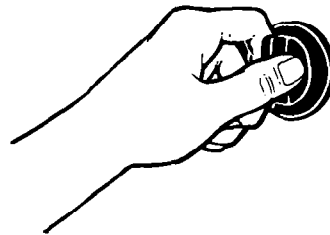

CARING FOR YOUR RANGE

4. **Lift out** the reflector bowl. See "Cleaning chart" on page 34 for cleaning instructions.






Replacing

1. **Make sure** all surface units are off and cool before replacing surface units and reflector bowls.
2. **Line up** openings in the reflector bowl with the surface unit receptacle and the element hold-down clip.
3. **Hold** the surface unit as level as possible with the terminal just started into the receptacle. **Push** the surface unit terminal into the receptacle.

4. When terminal is pushed into the receptacle as far as it will go, **push down** the edge of the surface unit opposite the receptacle. The element hold-down clip will keep the surface unit from moving around.

NOTE: Reflector bowls reflect heat back to the utensils on the surface units. They also help catch spills. When they are kept clean, they reflect heat better and look new longer.

If a reflector bowl gets discolored, some of your utensils may not be flat enough, or some may be too large for the surface unit. In either case, some of the heat that's meant to go into or around a utensil goes down and heats the reflector bowl. This extra heat can discolor it.

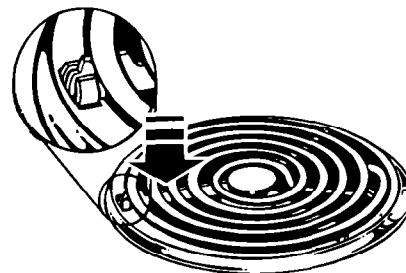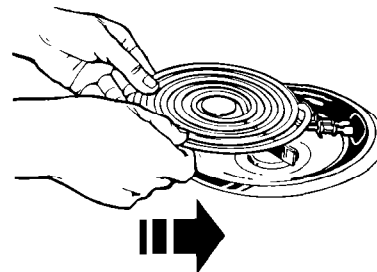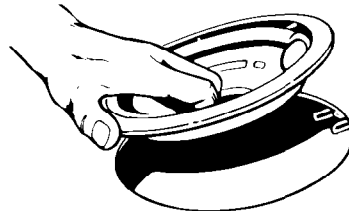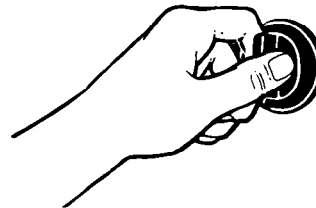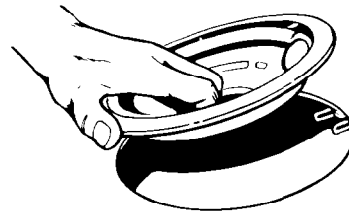

Lift-up cooktop

1. **Lift** front of cooktop at both front corners until the support rods lock into place.


⚠ WARNING

Personal Injury Hazard

Be sure both support rods are fully extended and in the locked position. Failure to do so could result in personal injury from the cooktop accidentally falling.

Product Damage Hazard

Do not drop the cooktop. Damage could result to the porcelain and the cooktop frame.

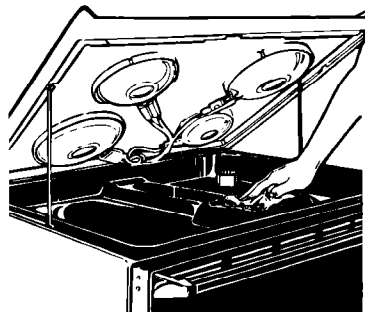

2. **Wipe** with warm, soapy water. **Use** a soapy steel-wool pad on heavily soiled areas.
3. **To lower the cooktop**, lift cooktop from both sides while pressing the support rods back to unlock them. **Lower** the cooktop into place.

Removing the oven door


Removing the oven door will help make it easier to clean the oven.

⚠ WARNING

Burn and Electrical Shock Hazard

Make sure all controls are OFF and the oven is cool before removing oven door. Failure to do so could result in burns or electrical shock.

1. **Open** the door to the first stop position.
2. **Hold** the door at both sides and **lift** it at the same angle it is in.
3. **To replace**, fit the bottom corners of the door over the ends of the hinges. **Push** the door down evenly. The door will close only when it is on the hinges correctly.

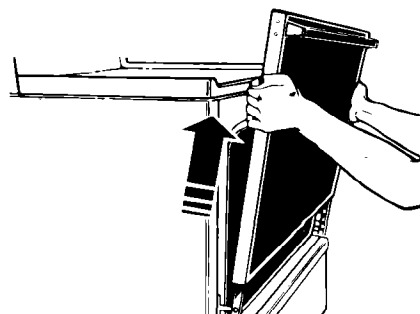

Cleaning chart

Use the following table to help you clean your range.

| PART | WHAT TO USE | HOW TO CLEAN |
|--|--|---|
| Control knobs | Sponge and warm, soapy water | <ul style="list-style-type: none"> • Turn knobs to OFF and pull straight away from control panel. • Wash, rinse and dry thoroughly. Do not soak. • Do not use steel wool or abrasive cleansers. They may damage the finish of the knobs. • Replace knobs. Make sure all knobs point to OFF. |
| Control panel | Sponge and warm, soapy water OR Paper towel and spray glass cleaner | <ul style="list-style-type: none"> • Wash, rinse and dry thoroughly. • Do not use steel wool or abrasive cleansers. They may damage the finish. • Do not spray cleaner directly on panel. Apply cleaner to paper towel. <p>NOTE: Make sure you have not turned the oven on when cleaning panel. If you have, push the Off/Cancel pad.</p> |
| Exterior surfaces (other than control panel) | Sponge and warm, soapy water | <ul style="list-style-type: none"> • Wash, rinse and dry thoroughly. • Use nonabrasive, plastic scrubbing pad on heavily soiled areas. • Do not use abrasive or harsh cleansers. They may damage the finish. <p>NOTE: Do not allow foods containing acids (such as vinegar, tomato or lemon juice) to remain on surface. Acids may remove the glossy finish. Also wipe up milk or egg spills when cooktop is cool.</p> |
| Surface units | No cleaning required | <ul style="list-style-type: none"> • Spatters or spills will burn off. • Do not immerse in water. |
| Porcelain reflector bowls | Nonabrasive, plastic scrubbing pad and warm, soapy water | <ul style="list-style-type: none"> • Wash, rinse and dry thoroughly. • Clean frequently. • Do not use abrasive or harsh cleansers. |
| Broiler pan and grid (clean after each use) | Steel-wool pad and warm, soapy water | <ul style="list-style-type: none"> • Wash, rinse and dry thoroughly. |

| PART | WHAT TO USE | HOW TO CLEAN |
|-----------------|--|---|
| Oven racks | Steel-wool pad and warm, soapy water | <ul style="list-style-type: none"> • Wash, rinse and dry thoroughly. |
| Oven door glass | Paper towel and spray glass cleaner OR Warm, soapy water and a nonabrasive, plastic scrubbing pad | <ul style="list-style-type: none"> • Make sure oven is cool. • Follow directions provided with the cleaner. • Wash, rinse and dry thoroughly. |
| Oven cavity | Sponge and warm, soapy water Soapy steel-wool pad for heavily soiled areas OR Commercial oven cleaner for heavily soiled areas Heavy-duty aluminum foil or shallow pan used while cooking | <ul style="list-style-type: none"> • Remove door for easier access. (See page 33.) • Wash, rinse and dry well. • Rinse well with water. <ul style="list-style-type: none"> • Remove door for easier access. • Place newspaper on floor to protect floor surface. • Follow directions provided with the oven cleaner. • Rinse well with clear water. • Use in well-ventilated room. • Do not allow commercial oven cleaners to contact the heating elements, heat seal, thermostat or exterior surfaces of the range. Damage will occur. • Place piece of foil or shallow pan, slightly larger than the cooking container, on lower rack to catch spillovers. <p>NOTE: Do not use foil or foil liner to cover the oven floor. Poor baking/roasting results could occur.</p> |

The oven light

The oven light will come on when you open the oven door. To turn the light on when the oven door is closed, use the Oven Light Switch on the control panel.



⚠ WARNING

Electrical Shock and Personal Injury Hazard

- Make sure oven and light bulb are cool and power to the range has been turned off before replacing the light bulb. Failure to do so could result in electrical shock or burns.
- The bulb cover must be in place when using the oven. The cover protects the bulb from breaking, and from high oven temperatures. Because bulb cover is made of glass, be careful not to drop it. Broken glass could cause injury.

To replace the oven light:

1. **Unplug** appliance or **disconnect** at the main power supply.
2. **Remove** the glass bulb cover in the back of the oven by screwing it out counter-clockwise.
3. **Remove** the light bulb from its socket. **Replace** the bulb with a 40-watt appliance bulb.
4. **Replace** the bulb cover by screwing it in clockwise. **Plug in** appliance or **reconnect** at the main power supply.

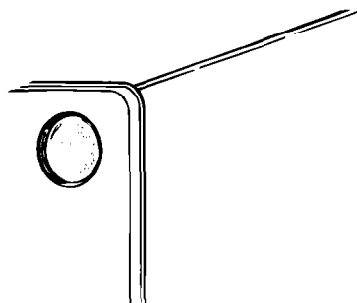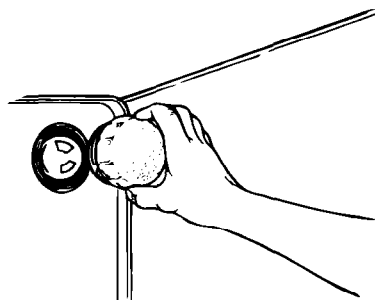

If You Need Assistance Or Service

This section is designed to help you save the cost of a service call. Part 1 of this section outlines possible problems, their causes, and actions you can take to solve each problem. Parts 2 and 3 tell you what to do if you still need assistance or service. When calling our Consumer Assistance Center for help or calling for service, please provide a detailed description of the problem, your appliance's complete model and serial numbers and the purchase date. (See page 2.) This information will help us respond properly to your request.

1. Before calling for assistance ...

Performance problems often result from little things you can find and fix without tools of any kind. Please check the chart below for problems you can fix. It could save you the cost of a service call.

| PROBLEM | POSSIBLE CAUSE | SOLUTION |
|---|--|--|
| Nothing will operate | The power cord is not plugged into a live circuit with proper voltage. A household fuse has blown or a circuit breaker has tripped. | Plug the power cord into a live circuit with proper voltage. (See Installation Instructions.) Replace household fuse or reset circuit breaker. |
| The oven will not operate | The Oven Selector is not turned to BAKE or BROIL. A delayed start time has been programmed. The Oven Temperature Control Knob is not turned to a temperature setting. The electronic MEALTIMER™ control is not set correctly. | Turn the Oven Selector to the desired setting. Wait for the start time to be reached. Turn the Oven Temperature Control Knob to a temperature setting. Set the MEALTIMER control correctly. (See "Using the electronic MEALTIMER™ control" on page 18.) |
| The surface units will not operate | A household fuse has blown or a circuit breaker has tripped. Surface units are not plugged in all the way. The control knobs are not being set correctly. | Replace household fuse or reset circuit breaker. Plug surface units in all the way. (See "Replacing" on page 32.) Push control knobs in before turning to a setting. |
| Control knob(s) will not turn | You are not pushing in before turning. | Push control knob(s) in before turning to a setting. |

continued on next page

IF YOU NEED ASSISTANCE OR SERVICE

| PROBLEM | POSSIBLE CAUSE | SOLUTION |
|--|--|---|
| Cooking results are not what you expected | <p>The range is not level.</p> <p>The oven temperature is too low or too high.</p> <p>The oven was not preheated before baking.</p> <p>The recipe has never been tested or is not from a reliable source.</p> <p>The pan used is not the type or size recommended in the recipe.</p> <p>There is not proper air circulation around pan when baking.</p> <p>Cooking utensil does not fit the surface unit being used.</p> | <p>Level range. (See Installation Instructions.)</p> <p>See page 15 for instructions on how to adjust the Oven Temperature Control.</p> <p>Preheat oven when called for in recipe.</p> <p>Use only tested recipes from a reliable source.</p> <p>Refer to a reliable cookbook for recommended pan type and size.</p> <p>Allow 1½ to 2 inches (4-5 cm) of air space on all sides of pan. There must be a minimum space of 1 inch (2.5 cm).</p> <p>Pan should be the same size or slightly larger than surface unit being used.</p> |
| The display is flashing "88:88" | There has been a power failure. | Reset the clock. (See page 12.) |
| "F2" shows in the display | | Call for service. (See Step 3 on page 39.) |

2. If you need assistance ...

Call Whirlpool Consumer Assistance Center telephone number. Dial free from anywhere in the U.S.:

1-800-253-1301

and talk with one of our trained consultants. The consultant can instruct you in how to obtain satisfactory operation from your appliance or, if service is necessary, recommend a qualified service company in your area.

If you prefer, write to:

Mr. William Clark
Consumer Assistance Representative
Whirlpool Corporation
2000 M-63
Benton Harbor, MI 49022

Please include a daytime phone number in your correspondence.

3. If you need service ...

Whirlpool has a nationwide network of authorized WhirlpoolSM service companies. Whirlpool service technicians are

trained to fulfill the product warranty and provide after-warranty service, anywhere in the United States. To locate the authorized Whirlpool service company in your area, call our Consumer Assistance Center telephone number (see Step 2) or look in your telephone directory Yellow Pages under:

**• APPLIANCE-HOUSEHOLD-
MAJOR, SERVICE & REPAIR**

- See: Whirlpool Appliances or
Authorized Whirlpool Service
(Example: XYZ Service Co.)

**• WASHING MACHINES &
DRYERS, SERVICE & REPAIR**

- See: Whirlpool Appliances or
Authorized Whirlpool Service
(Example: XYZ Service Co.)

4. If you need FSP® replacement parts ...

FSP is a registered trademark of Whirlpool Corporation for quality parts. Look for this symbol of quality whenever you need a replacement part for your Whirlpool appliance. FSP replacement parts will fit right and work right, because they are made to the same exacting specifications used to build every new Whirlpool appliance.

To locate FSP replacement parts in your area, refer to Step 3 above or call the Whirlpool Consumer Assistance Center number in Step 2.

5. If you are not satisfied with how the problem was solved ...

- Contact the Major Appliance Consumer Action Panel (MACAP). MACAP is a group of independent consumer experts that voices consumer views at the highest levels of the major appliance industry.
- Contact MACAP only when the dealer, authorized servicer and Whirlpool have failed to resolve your problem.

Major Appliance Consumer Action Panel
20 North Wacker Drive
Chicago, IL 60606

- MACAP will in turn inform us of your action.

WHIRLPOOL®

Electric Range Warranty

| LENGTH OF WARRANTY | WHIRLPOOL WILL PAY FOR |
|---|--|
| FULL ONE-YEAR WARRANTY From Date of Purchase | FSP® replacement parts and repair labor to correct defects in materials or workmanship. Service must be provided by an authorized Whirlpool SM service company. |
| LIMITED WARRANTY FOR LIFE OF THE PRODUCT Second Year Through Life of Product From Date of Purchase | FSP replacement parts for control knobs. |
| WHIRLPOOL WILL NOT PAY FOR | |
| <p>A. Service calls to:</p> <ol style="list-style-type: none"> 1. Correct the installation of your range. 2. Instruct you how to use your range. 3. Replace house fuses or correct house wiring. 4. Replace owner accessible light bulbs. <p>B. Repairs when your range is used in other than normal, single-family household use.</p> <p>C. Pickup and delivery. Your range is designed to be repaired in the home.</p> <p>D. Damage to your range caused by accident, misuse, fire, flood, acts of God or use of products not approved by Whirlpool.</p> <p>E. Repairs to parts or systems caused by unauthorized modifications made to the appliance.</p> | |

5/93

WHIRLPOOL CORPORATION SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow the exclusion or limitation of incidental or consequential damages, so this limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Outside the United States, a different warranty may apply. For details, please contact your authorized Whirlpool distributor or military exchange.

If you need service, first see the "Assistance or Service" section of this book. After checking "Assistance or Service," additional help can be found by calling our Consumer Assistance Center telephone number, **1-800-253-1301**, from anywhere in the U.S.